


POWERWING ASSEMBLY: "L" UNIT




Slatwall shown is optional

1. Complete Steps 1-4 of the Basic "L" Unit Assembly Instructions.
2. Next, insert the top of the Powerwing into the hole in the top of the upright.

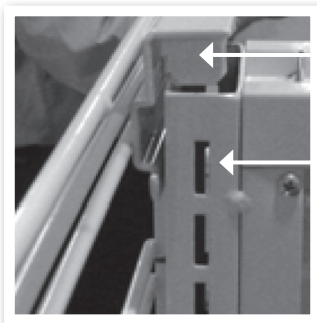

**Top of
Powerwing**
Upright

Before inserting completely, ensure the clip at the bottom of the Powerwing is resting (as shown) correctly on the bottom of the upright.

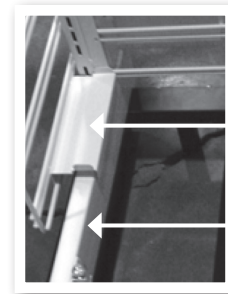

Clip
Upright

3. Finish assembling unit following the Basic "L" Unit Instructions. Omit the end of Step 6, which refers to attaching a Plug (P) to the unit.



Your completed unit with Powerwing looks like this.